


PRODUCT SHEET

Date of issue: 10/07/23

ALPHA 6103 - collection + storage + washing

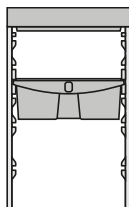

APPLICATIONS

Multipurpose trolley, ideal for areas where dusting, waste collection, floor mopping and cleaning of surfaces are required.

ECO BOX



COMPLIES WITH THE EUROPEAN GPP GUIDELINES ON THE USE OF ENVIRONMENTALLY FRIENDLY PRODUCTS IN PUBLIC ADMINISTRATIONS

Buckets made of recycled plastic at least 50% by weight, PSV certified, available in different colors according to their final use
Manufactured with repairable components and / or available as spare parts, to ensure a long life cycle



PSV PRODUCT

Product partially made of PSV certified plastic components - Plastic Second Life: the first Italian and European brand of environmental product certification that guarantees and makes it easier to identify goods obtained using recycled plastics



CARBON FOOTPRINT

Filmop is certified according to the Carbon Footprint Systematic Approach, carried out in compliance with the UNI EN ISO 14067:2018 standard, which allows to quantify the environmental impact of the product expressed in CO₂ emitted at each stage of the life cycle



ECO-FRIENDLY PRODUCT

Product made of separable materials and, consequently, recyclable at the end of its life
Product sold in packaging compliant with Legislative Decree 116 of 03-09-2020 concerning the obligation of environmental labeling for correct disposal at the end of use. 99% of the cardboard packaging used by the company is made on average with 80% recycled paper

Disclaimer: Filmop International Srl reserves the right to update the contents of this document at any time and without notice.

PRODUCT SHEET

Date of issue: 10/07/23

FEATURES

- Made of high quality polypropylene copolymer: light, shock-proof, heavy duty and low-temperature resistant
- Strong, tough, ergonomic, modular, easy to assemble and clean
- The base can be equipped with an additional fifth wheel in the middle to be much stronger in case of a heavy loaded trolley
- The vertical frames guarantee the highest hygiene, separating the waste collection compartment from the rest of the trolley
- Bagholder equipped with ergonomic push-bar, handle supports and hook. It is available in different versions: 120 L, 2x60 L, 1x40 L + 1x80 L, 3x40 L
- Possibility to replace the fixed bagholder with a foldable bagholder which reduce the overall dimensions of the trolley after use (space saver bagholder)
- Door for central storage compartment equipped with removable key and grip with key compartment
- The fixed side walls and the side doors are completely smooth and upon request, they can be customized with drawings, pictures or logo
- The central basket has a label which can be customized writing the operator's name, the working area or other useful information
- Buckets 4 L in different colours to separate the different chemical solutions, tools and cleaning equipment in use
- Two buckets 15 L which allow to separate the cleaning solution from rinse water for better cleaning results and hygiene, saving water, cleaning solution and labour time and consequently minimum effort of the operator
- Down-press wringer: ideal for kentucky mops and Speedy mop system
- The trolley can be equipped with "HUSH" system: the shock-absorbing pistons inserted in the bag holder allow a soft and very silent closure of the cover
- Several combinations of shelves and drawers are available: drawers 10 L, 22 L, 40 L, equipped with slide out limiter, with or without lock
- The trolley can be equipped with hooks, baskets with dividers, carry baskets, handle holders and many other accessories: we suggest you to check our technical catalogue in the "components and accessories" section of our Alpha line of trolleys in order to know the complete range of the available accessories.
- Latex-free product

MATERIAL

Polypropylene copolymer and Rilsan coated steel

REF.	NET WEIGHT (kg)	SIZE (cm) ↓ ↓ ↓	PCK	VOLUME (m³)	GROSS WEIGHT (kg)
0000MA6103U00	25,19	133x68x114	1	0,372	28,06
0000SE0104A	Blue plastic bucket 4 L with plastic handle				1 pc.
0000SE0104B	Red plastic bucket 4 L with plastic handle				1 pc.
0000SE0104C	Yellow plastic bucket 4 L with plastic handle				1 pc.
0000SE0104F	Green plastic bucket 4 L with plastic handle				1 pc.
0000SM00165	Set of T-shaped light grey closing plugs for vertical frames (6 pcs)				2 pcs
3048	Set of 3 stickers for buckets				1 pc.
7004A	REGULAR - blue plastic down-press wringer with plastic gears				1 pc.
8108A	Blue plastic bucket 15 L with plastic handle				1 pc.
8108B	Red plastic bucket 15 L with plastic handle				1 pc.
P066011U	Long base with wheels ø 100 mm				1 pc.
P1199900U	Upper basket				1 pc.
P1229906U	Grey plastic drawer 22 L without key				1 pc.
P175000U	Supporting plastic plate for Alpha trolleys				1 pc.
P2039903E	Vertical frame, 1 side with slides + 1 side for T-plugs, complete with screws and plugs				2 pcs
P2199907U	Central plastic basket (male-female version) with screws and plugs				1 pc.
P3059953E	Fixed side wall with fixing pins				1 pc.
P3059954E	Right door with fixing pins				1 pc.
P8161111U	120l waste bag holder, male fitting, with dustpan hook and handle clip				1 pc.
R1040010	Rilsan coated wringer support complete with screws				1 pc.

ACCESSORIES TO ORDER AS SEPARATE ITEMS

3650A	Blue plastic-coated bag 73x97 cm, maximum capacity 120 L	1 pc.
P291918A	Blue cover for bag holder 120 L	1 pc.

Disclaimer: Filmop International Srl reserves the right to update the contents of this document at any time and without notice.

PRODUCT SHEET

Date of issue: 10/07/23

ON REQUEST, WITH SURCHARGE



Rubber wheels ø 125 mm

TROLLEY REF.
0000MA6303U00



Wheels ø 125 mm

TROLLEY REF.
0000MA6603U00



Foldable bag holder 120 L

TROLLEY REF.
0300MA6103U00

WRINGER VERSIONS



BOOST - flat wringer

TROLLEY REF.
0071MA6103U00



PUNTO - roller wringer

TROLLEY REF.
0022MA6103U00

GENERAL PRODUCT SAFETY

The products sold by us do not need a product certification, as they are in compliance with the definition in Legislative Decree 206 of 06.09.2005

DECLARATION OF CONFORMITY

All the products sold by us are in compliance with the laws in force regarding safety and are covered by an insurance policy "Civil responsibility for products"