


PRODUCT SHEET

Date of issue: 30/06/23

MICRO-ACTIVA - ultra-microfiber mop, polyester backing, with strap tape system and colour-coded tag

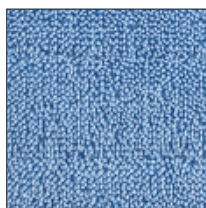

REF.	NOTES	WEIGHT (gr)	NET WEIGHT (kg)	SIZE (cm) ↓ ↓ ↓	PCK	VOLUME (m³)	GROSS WEIGHT (kg)
000EPN02012		45	0,045	30	25	0,011	1,32
000EPN03012		67	0,068	40	25	0,015	1,89
000EPN03022		93	0,093	60	25	0,03	2,77

Ideal for industrial floors, single-fired tiles, stoneware and woods with a medium degree of dirt

APPLICATIONS

Used with all mop holders with strap tape system for dusting, wet mopping, waxing and disinfection of smooth internal floors (hotels, houses, offices, hospitals) with medium degree of dirt

ECO BOX



COMPLIES WITH THE EUROPEAN GPP GUIDELINES ON THE USE OF ENVIRONMENTALLY FRIENDLY PRODUCTS IN PUBLIC ADMINISTRATIONS

Reusable Ecolabel (EU) certified microfiber "flat" mop
Microfiber denier dTtex ≤ 1 for an efficient water and chemical consumption



ECOLABEL CERTIFIED PRODUCT

Environmental label in compliance with UNI EN ISO 14024 that rewards the best eco friendly products, certifying their low environmental impact throughout their life cycle and qualifying them in the market



ECO-FRIENDLY PRODUCT

Product sold in packaging compliant with Legislative Decree 116 of 03-09-2020 concerning the obligation of environmental labeling for correct disposal at the end of use. 99% of the cardboard packaging used by the company is made on average with 80% recycled paper



LOW ENVIRONMENTAL IMPACT PRODUCT

The code 000EPN03012 has passed the test on the release of microplastics during washing and rinsing, carried out according to the ISO 23231 standard by an independent laboratory

Disclaimer: Filmop International Srl reserves the right to update the contents of this document at any time and without notice.

PRODUCT SHEET

Date of issue: 30/06/23

FEATURES

- Tests carried out by an independent external laboratory according to UNI EN 16615:2015 show that the mop, used wet, can remove the bacteria *Staphylococcus aureus* ATCC 6538, *Pseudomonas aeruginosa* ATCC15442 and *Enterococcus hirae* ATCC 10541 with a reduction capacity of 96.6%.
- Tests by an independent external laboratory show that the mop, used wet, can remove Coronavirus 229E from steel surfaces with a reduction capacity of 99.9%.
- Thanks to a particular twisting process, this twisted yarn keeps its shape even after many washing cycles with low linting
- It removes easily the dirt without friction on the floor; high absorbing capacity thanks to its composition
- Latex-free product

MATERIAL

CLEANING SIDE

Microfibre: 75%

Microfibre composition: 80% Polyester - 20% Polyamide

Microfibre Denier: 0,14

Other fibers: 25%

Fibre composition: 100% Polyester

Fabric weight: 440 gr/sqm

SYSTEM

Strap tape in polyester

ABSORBENCY

A dry mop absorbs up to twice its own weight

COVERING POWER

The mop can cover about:

25-30 m² in the 30 cm size35-40 m² in the 40 cm size40-45 m² in the 60 cm size

LIFE CYCLE

Can be washed max 400 cycles if washing instructions and warnings are followed

CARE AND MAINTENANCE

WARNINGS

Follow carefully the washing instructions and warnings on the detergent packaging (temperature and dosing) before washing

We recommend the use of normal detergent for textiles, no fabric softener

Always a pre-wash cycle in cold water without detergent to remove any residue of chemical solution

We suggest to use the specific net bags for the mop washing

WASHING INSTRUCTIONS



SUGGESTED washing temperature: 60° C



MAX washing temperature: 95° C



Bleaching possible - Do not use chlorine or bleach



Mechanical drying at low temperature 50°C



No ironing

Disclaimer: Filmop International Srl reserves the right to update the contents of this document at any time and without notice.

PRODUCT SHEET

Date of issue: 30/06/23



Do not dry clean

Do not use softener

Use alkaline detergents with Ph < 11

RELATED PRODUCTS



Mop holder with strips 2,5 cm for strap tape system and with Lock System joint



Mop holder with strips 2,5 cm for strap tape system



Tool for 2.5 cm wide strap tape system profile mops with ErgoSwing joint



Mop holder with 2,5 cm strips for strap tape system, with Uni-Connect fitting and cone and Lock System



Aluminium mop holder with strap tape system strips



Aluminium mop holder with strips for strap tape system and Lock System joint



Aluminium mop holder with strips for strap tape system, with ErgoSwing joint



Aluminium mop holder with strips for strap tape system, with Uni-Connect fitting and cone and Lock System



UNILAV SIDE GRIP - flat mop with 650ml bottle and holder with strap tapes



Kit **ERGODROP** - tank handle 500 ml with aluminium mop holder 40 cm with strips for strap tape system with ErgoSwing fitting, bordered Skill-Fur microfiber mop and dosing jug



TOP-DOWN® 20 lt - plastic bucket with plastic handle and hermetic cover

GENERAL PRODUCT SAFETY

The products sold by us do not need a product certification, as they are in compliance with the definition in Legislative Decree 206 of 06.09.2005

DECLARATION OF CONFORMITY

All the products sold by us are in compliance with the laws in force regarding safety and are covered by an insurance policy "Civil responsibility for products"