


PRODUCT SHEET

Date of issue: 31/01/23

SPEEDY MOP HOLDER® - foldable plastic mop holder with Lock System fitting

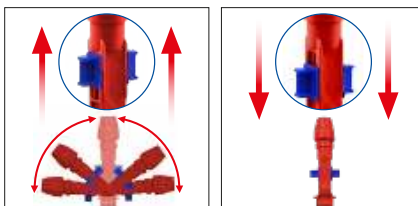

REF.	NOTES	NET WEIGHT (kg)	SIZE (cm) ↓ ↓ ↓	PCK	VOLUME (m³)	GROSS WEIGHT (kg)
00008316AB		0,57	40x11	10	0,024	6,1

APPLICATIONS

Speedy frame is used for floor wet mopping, cleaning walls, ceilings and tread-boards.

ECO BOX



COMPLIES WITH THE EUROPEAN GPP GUIDELINES ON THE USE OF ENVIRONMENTALLY FRIENDLY PRODUCTS IN PUBLIC ADMINISTRATIONS

Product suitable to be used with flat microfibers and wet mopping system with wringer (allowed for specific needs)



ECO-FRIENDLY PRODUCT

Product made of separable materials and, consequently, recyclable at the end of its life

Product sold in packaging compliant with Legislative Decree 116 of 03-09-2020 concerning the obligation of environmental labeling for correct disposal at the end of use. 99% of the cardboard packaging used by the company is made on average with 80% recycled paper

FEATURES

- Made of premium quality material: lightweight, shock-proof and resistant to frequent use
- Universal screw that allows the use of any kind of handles with diameter from 20 to 24 mm
- If the red button on the upper part of the frame is pressed down , the frame will open 180° with the flap mop head still hanging; this operation allows to rinse and wring the flat mop head
- Lock System allows to block the side movements of the mop holder and it guarantees the maximum adherence to vertical surfaces for better cleaning results . This system can be switched on and off by simply pushing up or down its small lever (locking device) with one's foot, without the use of one's hands and without bending any more

MATERIAL

Polypropylene and polyamide

Disclaimer: Filmop International Srl reserves the right to update the contents of this document at any time and without notice.

PRODUCT SHEET

Date of issue: 31/01/23

RELATED PRODUCTS



Mop **SPEEDY** polyester and cotton, polyester backing, looped yarn, with flaps 2 holes



Mop **SPEEDY** polyester and cotton, polyester backing, looped yarn inside and cut yarn outside, with flaps 2 holes



Mop **SPEEDY** cotton, polyester backing, looped yarn, with flaps 2 holes



Mop **SPEEDY** cotton, polyester backing, looped yarn inside and cut yarn outside, with flaps 2 holes



Mop **SPEEDY** polyester and cotton, polyester backing, looped yarn inside and cut yarn outside, with external flaps 2 holes



Mop **SPEEDY** polyester and cotton, polyester backing, looped yarn, with external flaps 2 holes



Mop **SPEEDY** cotton, polyester backing, looped yarn inside and cut yarn outside, with external flaps 2 holes



Mop **SPEEDY** cotton, polyester backing, looped yarn, with external flaps 2 holes



Mop **SPEEDY RAPIDO** microfiber, polyester backing, looped yarn, with flaps 2 holes



Mop **SPEEDY RAPIDO** coloured microfiber, polyester backing, looped yarn, with flaps 2 holes



SPEEDY RAPIDO microfiber mop, polyester backing, looped yarn, with external flaps 2 holes



SPEEDY RAPIDO coloured microfiber mop, polyester backing, looped yarn, with external 2-hole flaps



SPEEDY TRIPO microfiber mop, polyester backing, looped yarn, with external 2-hole flaps



SPEEDY TRIPO mop made of microfiber, cotton and polyester, with polyester backing, looped yarn, external 2-hole flaps



SPEEDY MASTER-TUFT cotton mop, polyester backing, tufting, looped yarn, with flaps 2 holes



SPEEDY DREI-TUFT microfiber, cotton and polyester mop, polyester backing, tufting, looped yarn, with flaps 2 holes, with colour-coded tag



SPEEDY MICRO-ACTIVA ultra-microfiber mop, polyester backing, with 2-hole flaps and colour-coded tag



SPEEDY PULI-SCRUB ultra-microfiber and polypropylene mop, polyester backing, with 2-hole flaps and colour-coded tag



SPEEDY PULI-BRUSH ultra-microfiber and polypropylene mop, polyester backing, with 2-hole flaps and colour-coded tag



SPEEDY ACTIVE-FUR microfiber mop with nylon inserts, polyester backing, 2-hole flaps and colour-coded tags

Disclaimer: Filmop International Srl reserves the right to update the contents of this document at any time and without notice.


PRODUCT SHEET

Date of issue: 31/01/23



SPEEDY SKILL-FUR striped microfiber mop, polyester backing, 2-hole flaps and colour-coded tags

PRODUCT VERSIONS

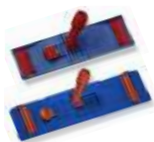

SPEEDY MOP HOLDER® - foldable plastic mop holder



SPEEDY MOP HOLDER® - plastic foldable mop holder with ErgoSwing fitting

GENERAL PRODUCT SAFETY

The products sold by us do not need a product certification, as they are in compliance with the definition in Legislative Decree 206 of 06.09.2005

DECLARATION OF CONFORMITY

All the products sold by us are in compliance with the laws in force regarding safety and are covered by an insurance policy "Civil responsibility for products"